S1015

4

NONE

12-19-84

9

VGD

NOTICE

WITHOUT

AND CHANGE

TOLERANCE CMB

MANUFACTURERS

5

DIMENSIONS ARE SUBJECT

IUMBER

SUPERSEDED OR VOID DATA

Р USE

WE CAN ASSUME NO RESPONSIBILITY FOR



LOCATION

## GENERAL PURPOSE ROOF DRAINS

### ROOF DRAIN WITH ADJUSTABLE EXTENSION

FUNCTION: Used in flat roofs of any construction. The adjustable extension sleeve permits adjustment from a minimum of 1 1/4" (32) to a maximum of 4" (100), easily accommodating up to 2 3/4"(70) of varying insulation thicknesses. The positive threading allows smooth perimeter movement and circumferential support of the top at any adjusted elevation. Large low profile dome provides sufficient free area for quick drainage of rainwater and protection against debris.

Free Area 102.5 SQ IN (661) SQ CM Polyethylene Dome 15 1/4 (390) DIA Combined Flashing Clamp And Gravel Stop Adjustable Extension Sleeve 5 1/4 (135) Low Position High Position 1 1/4 (32) MIN 2 1/4 (57) MIN 2 1/2 (64) MAX 4 (100) MAX 1 1/8 (29) MIN 3 3/4 \*\*5 (125) <sub>(95)</sub> Reversible Collar Gaskets recommended deck opening Underdeck Clamp with suffix -R 17 (430) DIA (When Specified) 14 (355) DIA less Suffix -R

\*This dimension to internal stop of Speedi-Set Gasket Same for Caulk, NO-HUB and Speedi-Set, 3 3/4 (95) for Threaded

A (Pipe Size) = 02(50), 03(75), 04(100), 05(125) or 06(150)

Fig. 1015C . . . . CAULK OUTLET Fig. 1015Y . . . . NO-HUB OUTLET

-11 (280) DIA-

#### **REGULARLY FURNISHED:**

Duco Cast Iron Body with Adjustable Extension Sleeve, Reversible Collar, Combined Flashing Clamp and Gravel Stop with Polyethylene Dome.

Note: See reverse side for assembly instructions.

NOTE: Dimensions shown in parentheses are in millimeters.

#### **VARIATIONS:**

Expansion Joint (Specify Fig. 1710) Shaped Underdeck Clamp -CL Speedi-Set Service Weight 02(50), 03(75) & 04(100)" sizes only XH Speedi-Set Extra Heavy 02(50), 03(75) & 04(100)" sizes only Secondary Flashing Clamp -C2 Sump Receiver -R Underdeck Clamp -C Vandal Proof Dome -U Side Outlet Drain (Specify Fig. 1025)

#### **OPTIONAL MATERIALS:**

Aluminum Dome -AD Cast Iron Dome -CID Galvanized Cast Iron -G Rough Bronze Dome -RBD

#### ▲ Optional domes' free area are as follows:

98 (632) Aluminum 80 (516) Cast Iron Bronze 95 (613)

N M L K	7-30-19 8-18-15 06/01/09 12-15-06	Removed NOTE Added Flow Rate Note Added Optional Dome Notes Added Note	MW TBW JJ RN	CL BW CL CL	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER
REV.	DATE	DESCRIPTION	BY	CKD. BY			.0.0

**Threaded Outlet** 

S1015BS

⋖

6-29-88

APPROVED BY

6

SUPERSEDED OR VOID DATA

Р

USE NONE

NO RESPONSIBILITY FOR

WE CAN ASSUME

NOTICE

WITHOUT

AND CHANGE

TO MANUFACTURERS

DIMENSIONS ARE SUBJECT


IGURE VUMBER

DRAWING NUMBEF



LOCATION

# ADJUSTABLE ROOF DRAIN

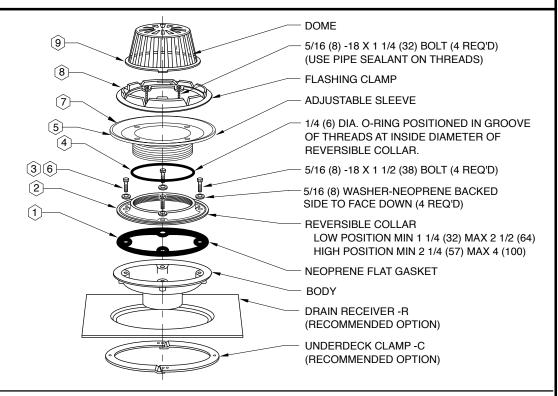

- Position flat gasket on drain body, align holes in gasket with holes in body.
- Determine if reversible collar is to be installed in the low (1 1/4" to 2 1/2") or high (2 1/4" to 4") position.
- (2a) Place reversible collar on body and align holes in collar with holes in gasket and body.
- Secure collar to body with 1 1/2" long bolts insuring neoprene backed washers are installed with neoprene side facing down at proper locations between top of reversible collar and bolt head. Tighten bolts in the following manner: 1, 3, 2 & 4. Tighten No. 1 bolt approximately one full turn then No. 3, No. 2 and No. 4 (same manner as for No. 1). Continue this method until reversible ring has been secured evenly all around.
- 4 Wipe "O" Ring recess in reversible collar clean. Insert dry "O" Ring in groove of threads at inside diameter of reversible collar. Lubricate the face of "O" Ring in it's entirety with (1) tube of the lubricant provided and remaining threads.

- Lubricate liberally the entire lead-in chamfer and first 2 threads of the adjustable sleeve. Thread adjustable sleeve into reversible collar and adjust to required height. Do not exceed minimum/maximum adjustment dimensions.
- (6) Check bolts a final time to insure tightness.
- Run waterproofing membrane over top of adjustable sleeve to inside of bolt circle.
- Install flashing clamp and secure with (4) bolts, use pipe sealant on threads. Again tighten bolts in the 1, 3, 2, 4 manner. (See (3))
- Install Dome

NOTE: Dimensions shown in parentheses are in millimeters.

J H G F	7-30-19 8-18-15 1-13-15 12-15-06	Removed NOTE Added Flow Rate Note Rev. Callouts, Text Rev. Dwg.	MW TBW TBW RN	CL BW CL	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 1015BS
REV.	DATE	DESCRIPTION	BY	CKD. BY			10.000