DRAWING NUMBE S7150

VOID DATA

OB

E A USE OF SUPERSEDED

RESPONSIBILITY

CAN ASSUME NO

NOTICE

AND CHANGE

TOI FRANCE

MANUFACTURERS

DIMENSIONS ARE

UMBER

NONE

5-16-83

APPROVED BY SJM

CHECKED BY

B

DRAWN

SMITH MFG. CO.

MEMBER OF MORRIS GROUP INTERNATIONAL
POST OFFICE BOX 3237
MONTGOMERY ALABAMA 36109-0237 (USA)
TEL: 334-277-8520 FAX: 888-377-7818 www.jrsmith.com




LOCATION

BACKWATER VALVES

IN-LINE MANUAL SHUT-OFF GATE VALVE

FUNCTION: Functions as a drainage control valve; flapper type backwater valve provides temporary protection against sewage backflow surges. Manually closed "spade" type gate valve provides additional complete "closure" protection during emergency conditions, when building is completely shut down or during extended periods of backflow conditions.

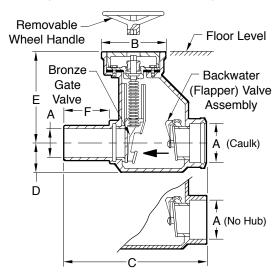

Extension Packing Nut
(As per Fig. No.)
Removable
Gland Plate

Fig. 7151C with 12(305) in. Extension/04(100) in. Inlet & Outlet
Fig. 7151Y with 12(305) in. Extension/04(100) in. Inlet & Outlet
Fig. 7152C with 24(610) in. Extension/04(100) in. Inlet & Outlet
Fig. 7152Y with 24(610) in. Extension/04(100) in. Inlet & Outlet
Fig. 7153C with 9 1/2(240) in. Extension/06(150) in. Inlet & Outlet
Fig. 7153Y with 9 1/2(240) in. Extension/06(150) in. Inlet & Outlet
Fig. 7154C with 21 1/2(545) in. Extension/06(150) in. Inlet & Outlet
Fig. 7154Y with 21 1/2(545) in. Extension/06(150) in. Inlet & Outlet

Fig. 7150C	CAULK INLET
	NO-HUB OUTLET
Fig. 7150Y	NO-HUB INLET & OUTLET

Α	В	С	D	Е	F
SIZE	DIA.				
04(100)	8 (205)	18(455)	3 3/4(95)	12(305)	5(125)
06(150)	10 1/2(265)	20(510)	4 1/2(115)	14 1/2(370)	5(125)

For other extension lengths

Adaptors

Extra Heavy Soil Pipe and 3/4" (19) Brass or Galvanized Pipe Stem (Furnished by Others)

Fig. 7155C...... CAULK WITH EXTENSION ADAPTOR

NOTE: B.W.V. flapper set at factory to hang in closed position. Pin can be moved to permit flapper to hang open 1/4" (6) to permit air circulation.

NOTE: 4(100) size furnished with Delrin Backed Neoprene flapper. 6(150) size furnished with bronze flapper.

NOTE: Fig. 7150C and 7150Y are accessible from finished floor. Non-rising stem with spade-shaped gate assures positive closure.

NOTE: Extension joint(s) must be caulked using 1"(25) of oakum and 1"(25) of poured lead. Not sized for compression type gaskets.

Fig. 7155Y.....NO-HUB INLET & OUTLET

NOTE: During periods when manual shut-off valve is closed, use of building plumbing fixtures and drains must be avoided.

REGULARLY FURNISHED:

Duco Cast Iron Body and Cover with Removable Wheel Handle. Bronze Gate and Bronze Flapper Valve. Cast Iron Extensions as Indicated by Figure Number Selected. VARIATIONS:

Outlet Sized for Service Weight -SW (When Specified)

OPTIONAL MATERIALS:

Galvanized Cast Iron -G

NOTE: These valves offer protection against backwater surges. Backflow is prevented when valve is not obstructed by debris or sludge. Use for gravity flow only, not for pressurized applications.

NOTE: Dimensions shown in
parentheses are in millimeters.

P N M L		Revised Note Added Note Removed 3" Size Added Details	KK TBW JJ JJ	CL BW CL JCS	 VOLUME CUBIC FEET	FIGURE NUMBER 7150
REV.	DATE	DESCRIPTION	BY	CKD. BY		, , , ,

S7150BS

4

NONE

4-23-68

APPROVED BY

CHECKED

DRAWN BY

(23)

DIMENSIONS ARE


FIGURE NUMBER

DRAWING NUMBER

LOCATION

BACKWATER VALVES INLINE MANUAL SHUT-OFF GATE VALVE

MEMBER OF

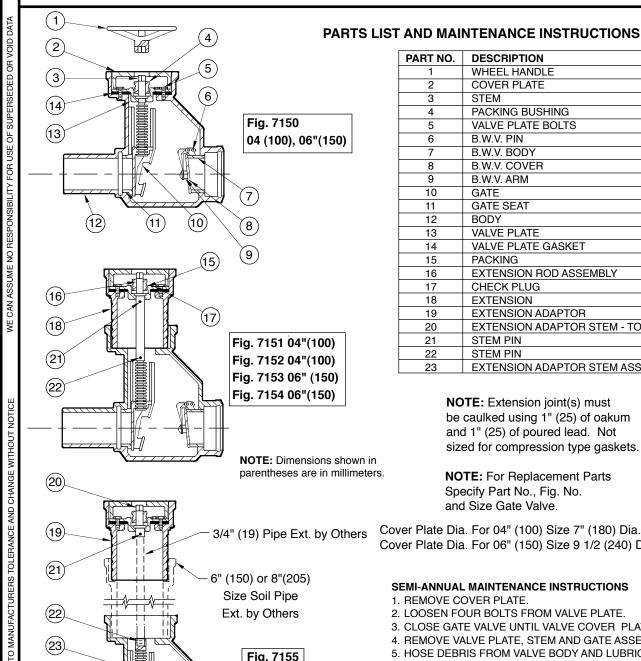

PART NO.	DESCRIPTION
1	WHEEL HANDLE
2	COVER PLATE
3	STEM
4	PACKING BUSHING
5	VALVE PLATE BOLTS
6	B.W.V. PIN
7	B.W.V. BODY
8	B.W.V. COVER
9	B.W.V. ARM
10	GATE
11	GATE SEAT
12	BODY
13	VALVE PLATE
14	VALVE PLATE GASKET
15	PACKING
16	EXTENSION ROD ASSEMBLY
17	CHECK PLUG
18	EXTENSION
19	EXTENSION ADAPTOR
20	EXTENSION ADAPTOR STEM - TOP
21	STEM PIN
22	STEM PIN
23	EXTENSION ADAPTOR STEM ASS'Y - LOWER

NOTE: Extension joint(s) must be caulked using 1" (25) of oakum and 1" (25) of poured lead. Not sized for compression type gaskets.

NOTE: For Replacement Parts Specify Part No., Fig. No. and Size Gate Valve.

Cover Plate Dia. For 04" (100) Size 7" (180) Dia. Cover Plate Dia. For 06" (150) Size 9 1/2 (240) Dia.

SEMI-ANNUAL MAINTENANCE INSTRUCTIONS

- 1. REMOVE COVER PLATE.
- 2. LOOSEN FOUR BOLTS FROM VALVE PLATE.
- 3. CLOSE GATE VALVE UNTIL VALVE COVER PLATE LOOSENS.
- 4. REMOVE VALVE PLATE, STEM AND GATE ASSEMBLY.
- 5. HOSE DEBRIS FROM VALVE BODY AND LUBRICATE STEM AND DISC HINGE.
- 6. REPLACE ASSEMBLY IN VALVE BODY, MAKE SURE THE GATE IS IN TRACK.
- 7. START THE BOLTS, AND TURN WHEEL HANDLE TO OPEN POSITION.
- 8. TIGHTEN BOLTS.

ED C B	1-19-96 11-2-95 7-10-95 9-30-92	Removed 03" Removed 05" Added Millimeters Added Note	CMD EMB EMB TWK	BS BS BS	 VOLUME CUBIC FEET	FIGURE NUMBER 7150BS
REV.	DATE	DESCRIPTION	BY	CKD. BY		

Size Soil Pipe

Ext. by Others

Fig. 7155

04 (100),

06"(150)