



# DOUBLE MALE CONNECTION FABRICATION DETAIL

**STEP 1:** APPLY A BEAD OF CHEM-CALK 900 SEALANT TO THE MALE END OF ONE OF THE CHANNELS.

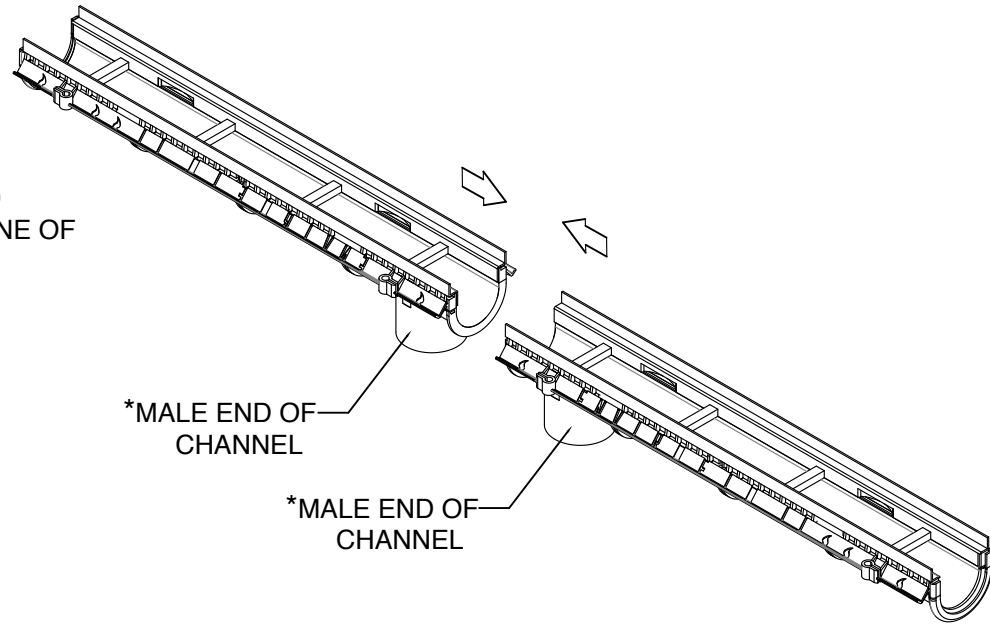

\*Channel Sections must be the same number, ie. #10

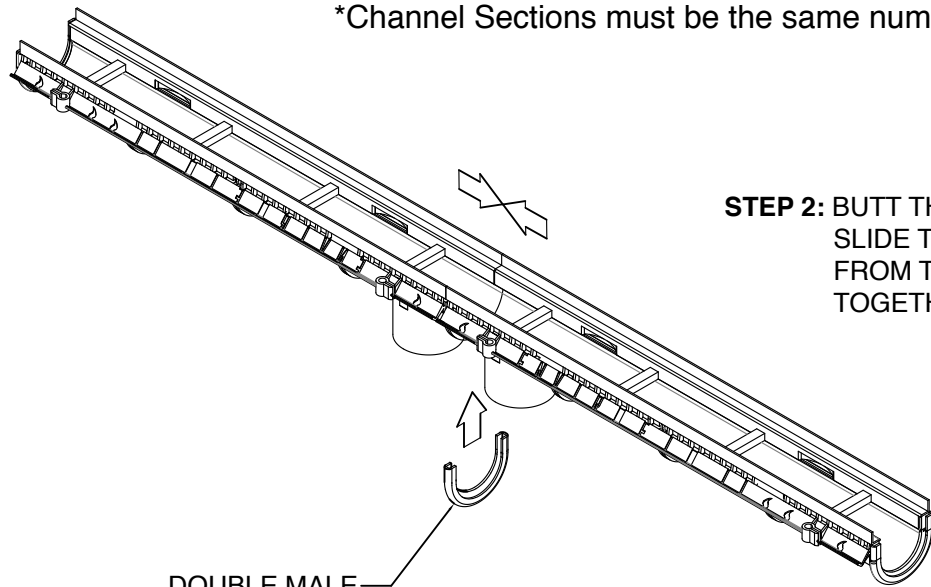

**STEP 2:** BUTT THE MALE ENDS TOGETHER AND SLIDE THE DOUBLE MALE COUPLING UP FROM THE BOTTOM ONTO THE BUTTED TOGETHER END FLANGES.



**WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)